


Re-enroll SCRAM Remote Breath Client in SCRAMNET®

In instances where the quality of a client's initial photo is poor when assigning a SCRAM Remote Breath device, and a new photo is required, you can now re-enroll the client in SCRAMNET® without having to unassign and reassign the device. To do this:


1. From the client's *Equipment* page, click the **Re-Enroll** link.

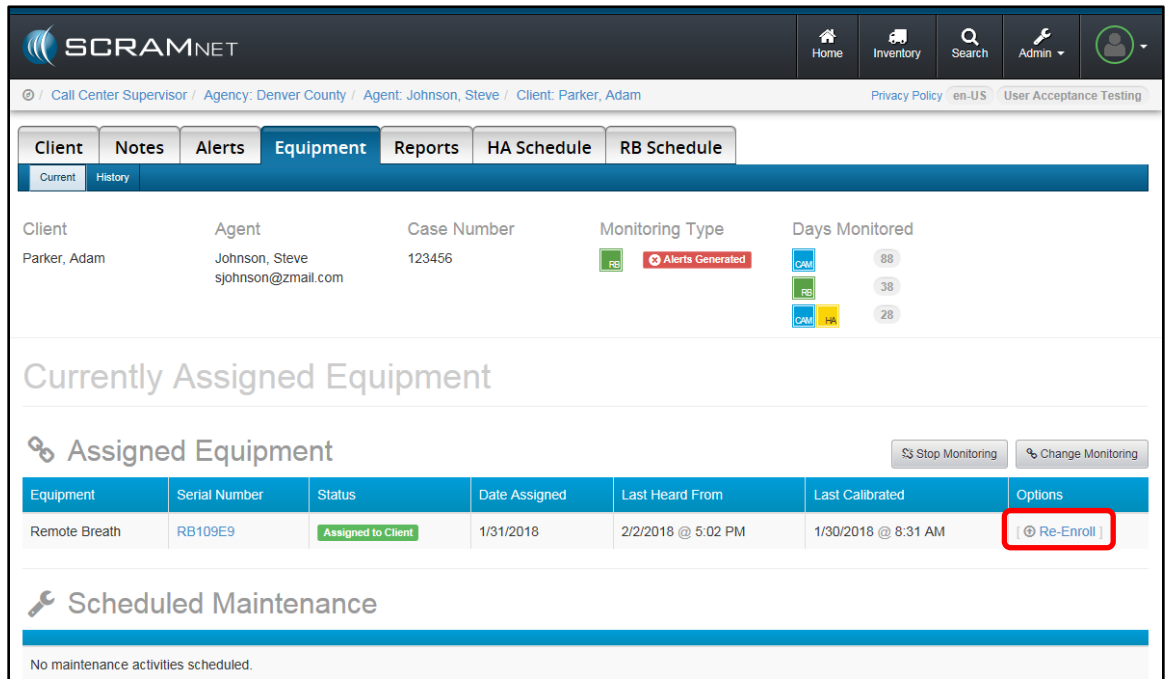

Client: Parker, Adam | Agent: Johnson, Steve | Case Number: 123456 | Monitoring Type: REB Alerts Generated

Equipment	Serial Number	Status	Date Assigned	Last Heard From	Last Calibrated	Options
Remote Breath	RB109E9	Assigned to Client	1/31/2018	2/2/2018 @ 5:02 PM	1/30/2018 @ 8:31 AM	Re-Enroll

2. After reading the information in the pop up, click the **Re-Enroll Client** button.

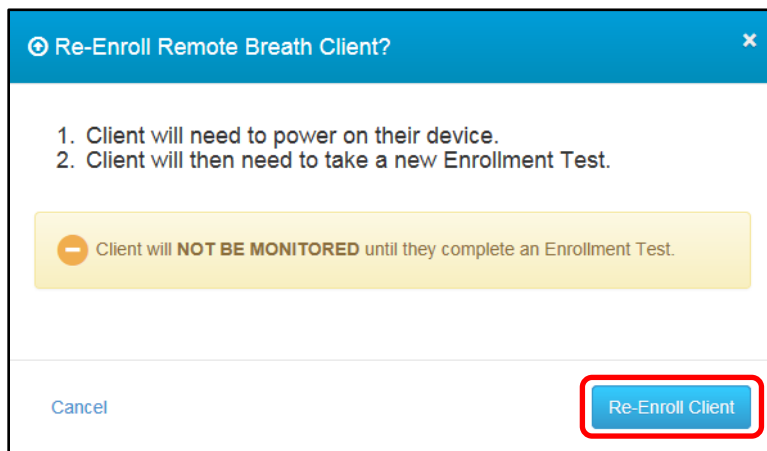


Re-Enroll Remote Breath Client?

1. Client will need to power on their device.
2. Client will then need to take a new Enrollment Test.

Client will **NOT BE MONITORED** until they complete an Enrollment Test.

Cancel | **Re-Enroll Client**

The client's *Equipment* page reappears with a banner indicating that re-enrollment is in progress and the SCRAM Remote Breath device is in the "Pending Assignment" status.

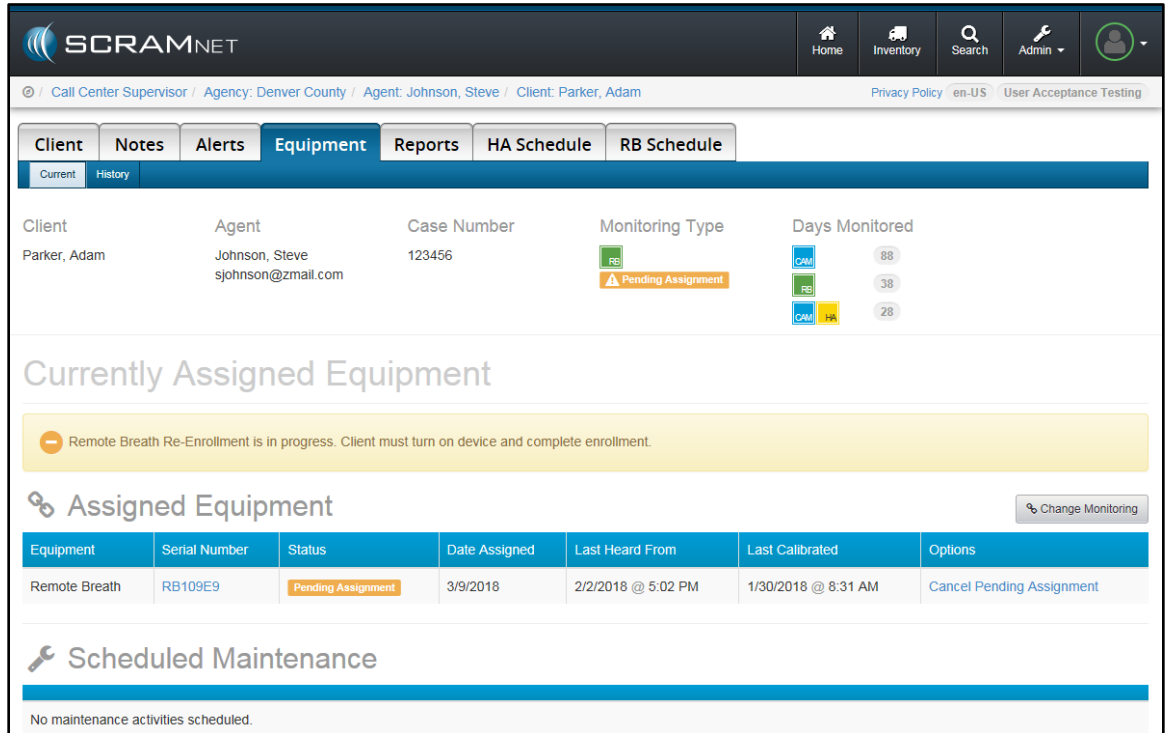


The screenshot shows the SCRAMNET interface for a client named Parker, Adam. The 'Equipment' tab is selected, and a yellow banner at the top indicates: "Remote Breath Re-Enrollment is in progress. Client must turn on device and complete enrollment." Below this, the 'Assigned Equipment' table shows a Remote Breath device with a status of "Pending Assignment".

Equipment	Serial Number	Status	Date Assigned	Last Heard From	Last Calibrated	Options
Remote Breath	RB109E9	Pending Assignment	3/9/2018	2/2/2018 @ 5:02 PM	1/30/2018 @ 8:31 AM	Cancel Pending Assignment

- Once the client has taken an acceptable initial photo, completed all practice breath tests, and the device has been shut down, click the **Equipment** tab to refresh the client's *Equipment* page.

The remote breath device is now set to the "Assigned to Client" status.

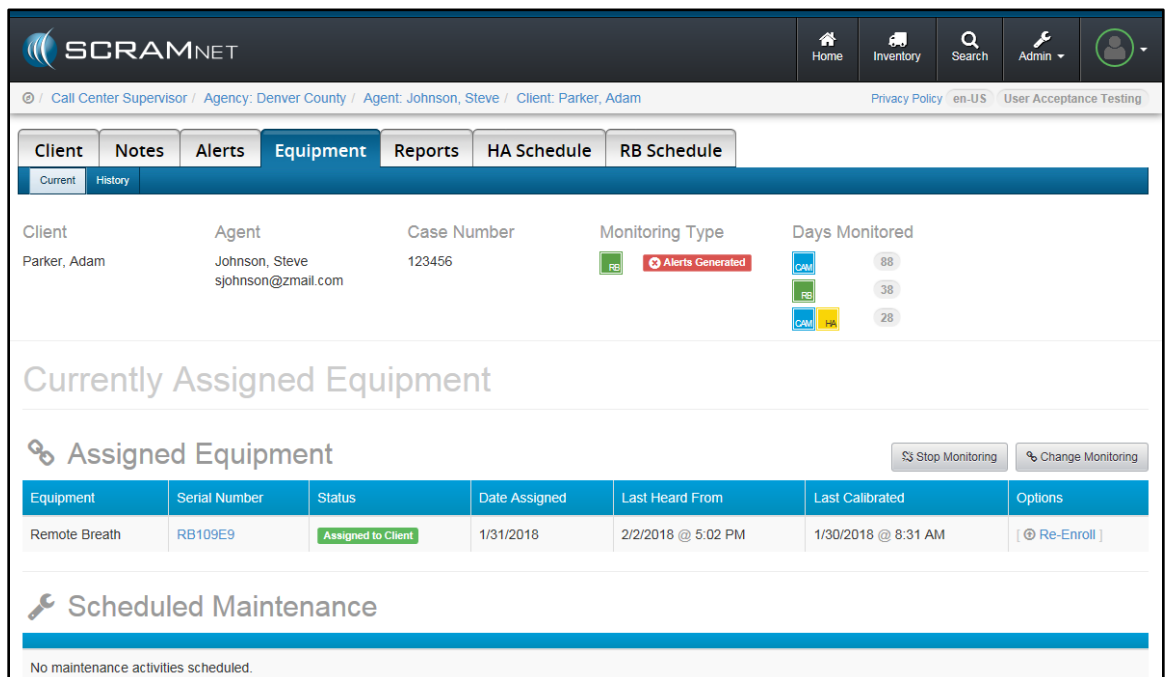

The screenshot shows the SCRAMNET interface after refreshing. The 'Assigned Equipment' table now shows the Remote Breath device with a status of "Assigned to Client".

Equipment	Serial Number	Status	Date Assigned	Last Heard From	Last Calibrated	Options
Remote Breath	RB109E9	Assigned to Client	1/31/2018	2/2/2018 @ 5:02 PM	1/30/2018 @ 8:31 AM	[Re-Enroll]